

## FIKE CYBERCAT™ 50 INTELLIGENT FIRE ALARM CONTROL SYSTEM

### DESCRIPTION

Fike's CyberCat 50 (P/N 10-070) is a state-of-the-art true intelligent digital peer-to-peer modular fire alarm control system. It is ideal for all life safety and property protection applications and is intended for both commercial and industrial use. It is designed with extensive programmability that allows the almost-instantaneous relay of information and the ability to perform process management tasks with ease including shutdowns, HVAC, Voice Evacuation Systems, Dampers, Doors, Elevators, and Security, CCTV/Building Management Awareness.

This cost-effective panel comes standard with one Signaling Line Circuit (SLC) that supports 50 devices. The 50 devices may be any mix and match of sensors and modules. The CyberCat 50 utilizes extreme intelligence via its eclipse based sensors including photoelectric, photoelectric with heat, ionization, photoelectric duct, and heat detectors. It also utilizes Eclipse™ based modules such as the monitor, mini-monitor, relay, intelligent pull station and control modules. With CyberCat 50 every device communicates as a peer on the signaling line circuit. These peers not only communicate up-to-the-second information to the control panel, but also communicate with each other. Each device is capable of generating accurate and highly detailed information. Conventional fire alarm systems give a general idea of the fire's location, while the CyberCat 50 intelligent sensors indicate precisely which device is in an alarm state. This intelligence provides incredible speed with response times as little as one-quarter second between manual pull station and notification appliance. Its flexibility allows you to attach the intelligent devices that are required for your specific application.

The System is programmed with either the Windows based field configuration software C-LINX™ or through a comprehensive password protected front-panel keypad programming options. This option allows you to quickly update and adapt to any future requirements or changes in the system such as changes in occupancy or remodeling. The sophisticated control panel circuitry coupled with the software allows you to read specific information and sensitivity levels of the different Eclipse devices. The sensors also compensate for any changes due to age, contamination, or other environmental factors.

### System Operation

The CyberCat 50 Control system operates on a "Zone and State" relationship. In this design, all input and output devices must be assigned to at least one zone or to all zones (254 are available), each one defining an area to be protected. Input devices can be assigned up to 253 zones (one zone is typical) and output devices may be configured for up to 254 zones.

These devices use the SLC signaling line circuit to exchange status information with other devices as well as with the control panel. When an input is activated, it is configured to cause its associated zone to enter into an operational state. Any detection device will cause its associated zone to enter into an alarm state. The output devices are configured to activate to protect and evaluate the endangered zone. This system is completely modular, allowing you the flexibility to design a system that is just right for your application. A typical configuration is shown on page 2 that illustrates the communications of a CyberCat 50 system.




*Fike CyberCat 50*

### APPROVALS

- UL S2203
- FM 3029134

Form No. D.1.19.01-1

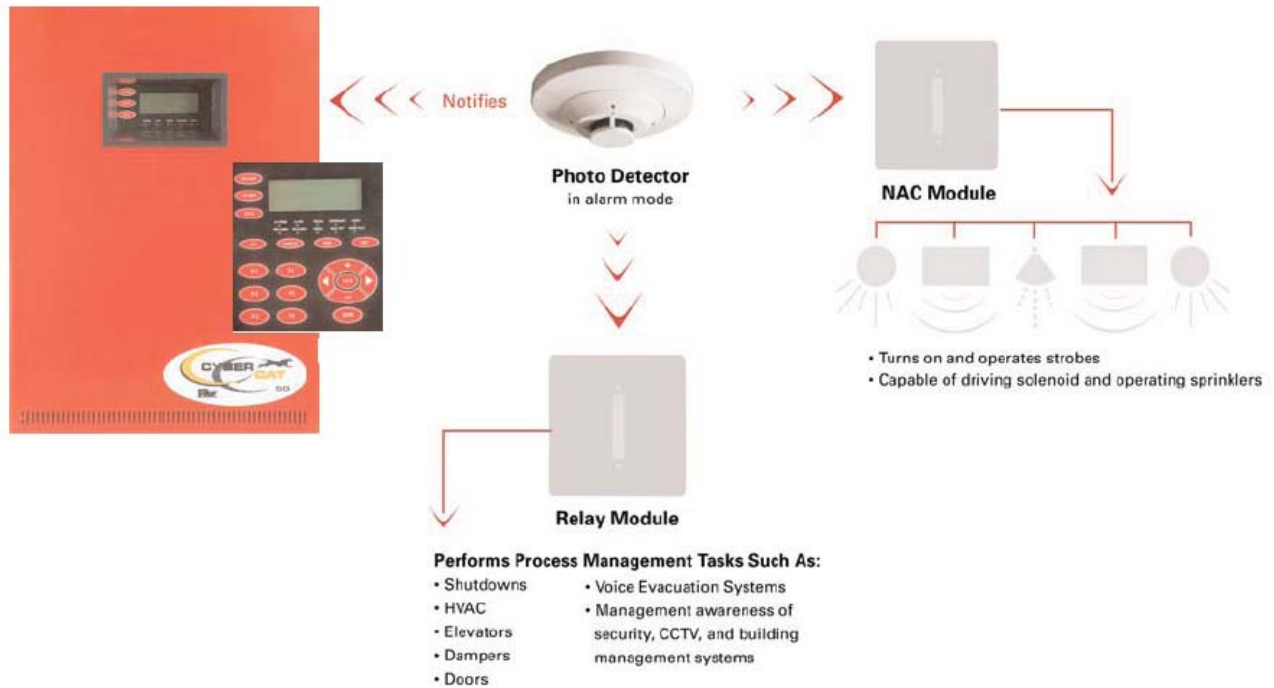

## STANDARD FEATURES/SPECIFICATIONS

The Cybercat features are designed to save lives and protect your valuable capital investments through unprecedented speed, intelligence and flexibility. These features include:

### General

- Two Class A or B 24VDC, 1.75A NAC (bell) circuits on main board with built in System Sensor or Gentex synchronization protocol
- 254 user defined zones
- 80 character, backlit LCD display
- Real time clock
- 3200 event history buffer
- Critical process monitoring
- One-person Walktest capability
- Disable by circuit or zone or device
- Drill function at panel and remote
- Provides solenoid releasing operation
- Alarm verification
- Easy to add/remove devices
- Diagnostic menus
- Local piezo with distinct event tones
- 10 Status LEDs to easily identify system status
- Built-in point ID DACT Module
- Supports up to 31 peripheral devices such as Remote Display, LED Graphic, Zone Annunciators, Ethernet Modules and Multi-Interface Modules
- USB port for programming

## STANDARD FEATURES/SPECIFICATIONS (Continued)

### Power

- 5.25 amps useable alarm power
- Operation from 120VAC/60 Hz or 240 VAC/50 Hz
- Two 24V DC, 2A continuous auxiliary power outputs
- Supports up to 75AH of batteries

### Signaling Line Circuit

- Address devices with Infrared (IR) tool, similar to remote control device
- One SLC loop, NFPA style 4, 6 or 7
- 50 devices, any mix and match of sensors and modules
- True peer-to-peer digital protocol for extremely fast and reliable communications
- Auto address function
- Automatic day/night sensitivity adjustment
- Automatic holiday sensitivity adjustment
- Acclimate operation for sensors
- IR Tool provides ability to read sensitivity levels or perform remote test of device
- Devices contain multi-color LED for quick reference of device status
- Sensors provide early warning pre-alarm detection and can also provide a summing feature (up to eight sensors)

### NAC Circuit

- Two NAC circuits standard
- Rated at 24VDC, 1.75 Amps maximum Class A or B
- Built-in synch protocol for System Sensor®, and Gentex® devices

## CONTROL SYSTEM MODULES

### Cybercat 50 Controller (P/N 10-2620)

The Controller contains the power supply, microprocessor, hardware interface, display and keypad. The controller's internal power supply provides 2 Amps Normal Standby Current/5.25 Amps Alarm Current.

### Enclosure

- Steel Enclosure 22.1" H x 14.35" W x 4" D (Back-box dimensions)
- Enclosure is equipped with a 0.50" wide lip to facilitate flush mounting
- Removable door for ease of installation
- Available in red or black
- Dead Front option available

### Point ID Dact (Digital Alarm Communicator Transmitter) Module (P/N 10-2528)

The DACT provides interface with Central Station monitoring systems. It is available with 5 contact zones of connection OR the intelligent serial interface which provides point ID information. The Contact ID form is the preferred reporting format. It provides a four digit account code followed by a three digit event code, a two-digit group number, and a three digit contact number, all of which are used to provide specific point identification. This DACT can also provide an SIA or 4/2 Pulse reporting format. *Note:* 10-2476 is same as 10-2528 with enclosure for external mounting. This is included in all 50 Point CyberCats Panels.

## CONTROL SYSTEM MODULES (Continued)

### **14 Button Remote Display Unit ( P/N 10-2646)**

The Fike fourteen button remote display (FRD), provides remote annunciation of Fike's intelligent control panels. The FRD is provided with a 80 character, backlit display which performs two display functions. First, it duplicates information provided by the control panel. Additionally the FRD has the capability of viewing system conditions such as alarm, trouble, supervisory, etc. The FRD also includes six keys (Enter, Escape, +/-, left/right arrow) that are used for navigation through events as well as configuration of the device. Additionally it has eight programmable buttons that can be configured for things such as reset, silence, acknowledge, drill, or process. A key lock is included for additional security access.

### **10 Button Remote Display Unit (P/N 10-2631)**

The Fike ten button remote display (FRD), provides remote annunciation of Fike's intelligent control panels. The FRD is provided with a 80 character, backlit display which performs two display functions. First, it duplicates information provided by the control panel. Additionally the FRD has the capability of viewing system conditions such as alarm, trouble, supervisory, etc. The FRD also includes six keys (Enter, Escape, +/-, left/right arrow) that are used for navigation through events as well as configuration of the device. Additionally it has four dedicated buttons that perform the following functions: drill, silence, acknowledge, and reset. A key lock is included for additional security access.

### **2 Button Remote Display Unit (P/N 10-2630)**

The Fike two button remote display (FRD), provides remote annunciation of Fike's intelligent control panels. The FRD is provided with an 80 character, backlit display which performs two display functions. First, it duplicates information provided on the main control panel. Additionally, the FRD has the capability of viewing system conditions such as alarm, trouble, supervisory, etc.

### **Fike Zone Annunciator (P/N 10-2373)**

The Zone Annunciator provides instant visual status of up to 10 zones of fire protection. Each zone has a red Alarm LED and yellow Trouble/Supervisory LED. Each LED is individually programmable for zone(s) and state(s). Each LED can be labeled using Avery Label 6467 or 5418. It is intended to be powered via the CyberCat 50 panel 24VDC auxiliary power. It communicates with the main control panel via RS485 communication. The annunciator provides the capability to remotely reset, silence and acknowledge the main control panel. Security to the unit is available via the standard Fike key. It mounts to a 5 gang masonry box (Raco 694). The unit can then be surface or flush mounted.

The following system modules are available for the CyberCat Control System:

### **Fike Ethernet Module (P/N 10-2627)**

This Module provides the ability to remote monitoring of multiple CyberCat 50 panels via Ethernet/IP. This module is connected to the CyberCat 50 via the peripheral connections at P6 and will be configured as a peripheral device. In order to utilize the remote monitoring capability, a network ID must be assigned to each panel for identification purposes. This module connects to the Panel at P6 per  $\pm$  and also requires 24 volts DC from the panel to P6 24A  $\pm$ . See the 06-388 Ethernet Module manual for more details.

### **Fike Multi-Interface (P/N 10-2583)**

The primary function of the multi-interface module is that it is used as a printer interface for the CyberCat control panels. It provides specific event and point information to be communicated from the panel to the printer. It is compatible with either a Epson FX-890 or equivalent IEEE 1284 standard printer or for UL required applications the Keltron 90 series UL listed fire alarm printer.

# CYBERCAT/PROGRAMMING CONFIGURATION

## Software

All configuration variables can be assigned using C-LINX software. This software provides the designer the capability to provide a pre-engineered design. The user can review the construction plans to assign the zones. The configuration can also be set to identify the exact device circuit operation desired along with the custom message information.

## IR Configuration Tool

This optional hand-held infrared remote control is available on the CyberCat system. This small device can be used in the field to simplify installation, testing and service. It operates with 2 AA batteries and can read device information such as loop, address, branch and service dates and initiate device test. This tool:

- Communicates bi-directionally with any CyberCat device
- Easily addresses devices by setting the loop and address
- Quickly reads sensitivity levels, date serviced, device type, loop and address, manufacture date
- Immediately records the date serviced
- Instantly initiates walk test of any sensor or module
- Accesses and tests hard-to-reach sensor or module (such as duct detector) through any other device on loop


## Field Wiring

Although the installation instructions provided for each module should be used for installation, please see the a general wiring diagram on the following page.

## Wiring Specifications

- Maximum Resistance: 70 ohms
- Maximum Capacitance: .06 uf
- 12,000 ft. maximum distance total from panel to last device.

## FIELD WIRING DIAGRAM

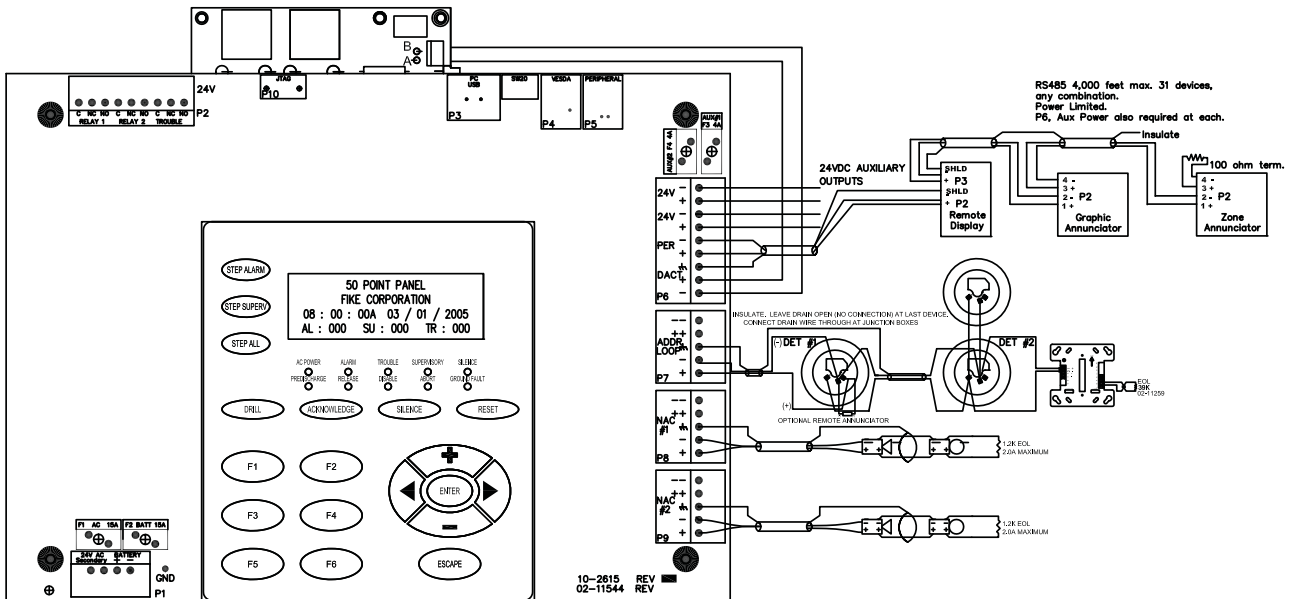

## ORDERING INFORMATION

FIKE P/N	Description	Individual Datasheet #
10-070-c-p or 10-070-c-p-d	CyberCat 50 System, includes Controller, Enclosure, and Transformer c: (R=Red, B=Black) p: (1=120V, 2= 240V ) d=Deadfront	D.1.09.01
10-2620	CyberCat 50 System Controller (included with 10-066-c-p and -L)	D.1.09.1
10-2519-c	Dead Front Option c: (R=Red, B=Black)	
10-2528	Point ID DACT (Included with CyberCat 50 systems above)	D.1.18.01
<b>Peripheral Devices</b>		
10-2630	2 Button Expanded Protocol Remote Display	P.1.103.01
10-2631	10 Button Expanded Protocol Remote Display	P.1.107.01
10-2646	14 Button Expanded Protocol Remote Display	P.1.108.01
10-2373	Zone Annunciator	D.1.16.01
10-2627	Ethernet Module	D.1.22.01
10-2583	Multi-Interface Module	P.1.85.01
<b>Intelligent Sensors</b>		
63-1052	Photoelectric Smoke Sensor Non-Isolator Version	P.1.88.01
63-1058	Photoelectric Smoke Sensor Isolator Version	P.1.88.01
63-1053	Photo/Heat Combination Sensor Non-Isolator Version	P.1.89.01
63-1059	Photo/Heat Combination Sensor Isolator Version	P.1.89.01
60-1039	Thermal Sensor Non-Isolator Version	P.1.90.01
60-1040	Thermal Sensor Isolator Version	P.1.90.01
67-033	Ion Sensor Non-Isolator Version	P.1.91.01
67-034	Ion Sensor Isolator Version	P.1.91.01
63-1057	Duct Sensor Non-Isolator Version	P.106.01
63-1062	Duct Sensor Isolator Version	P.106.01
63-1056	Duct Housing	P.106.01
<b>Intelligent Sensor Bases</b>		
63-1054	6" Sensor Base Non-Isolator Version	P.1.98.01
63-1060	6" Sensor Base Isolator Version	P.1.98.01
63-1055	4" Sensor Base Non-Isolator Version	P.1.99.01
63-1061	4" Sensor Base Isolator Version	P.1.99.01
63-1064	Sounder Base	P.101.01
63-1063	Relay Base	P.101.01
<b>Intelligent Modules</b>		
55-045	Mini-Monitor Module Non-Isolator Version	P.1.93.01
55-050	Mini-Monitor Module Isolator Version	P.1.93.01
55-041	4" Monitor Module Non-Isolator Version	P.1.92.01
55-046	4" Monitor Module Isolator Version	P.1.92.01
20-1063	Intelligent Pull Station Non-Isolator Version	P.1.65.01
20-1064	Intelligent Pull Station Isolator Version	P.1.65.01
55-042	Supervised Control Module Non-Isolator Version	P.1.94.01
55-047	Supervised Control Module Isolator Version	P.1.94.01
10-2360	Series Solenoid Diode/Resistor (Needed for solenoids)	
10-2413	Masterbox Interface	
55-043	Relay Module Non-Isolator Version	P.1.95.01
55-048	Relay Module Isolator Version	P.1.95.01
<b>Programming Parts</b>		
55-051	Infrared (IR) Remote Control Tool	P.1.97.01
06-327	C-LINX Software	
10-2629	Interface cable, USB/A Male to USB/B Male	
10-2477	DACT Programmer	



Copyright © Fike Corporation All Rights Reserved.  
Form No. D.1.19.01-1 September, 2008 Specifications are subject to change without notice.